



NOTE: Your components and connection locations may vary by model.

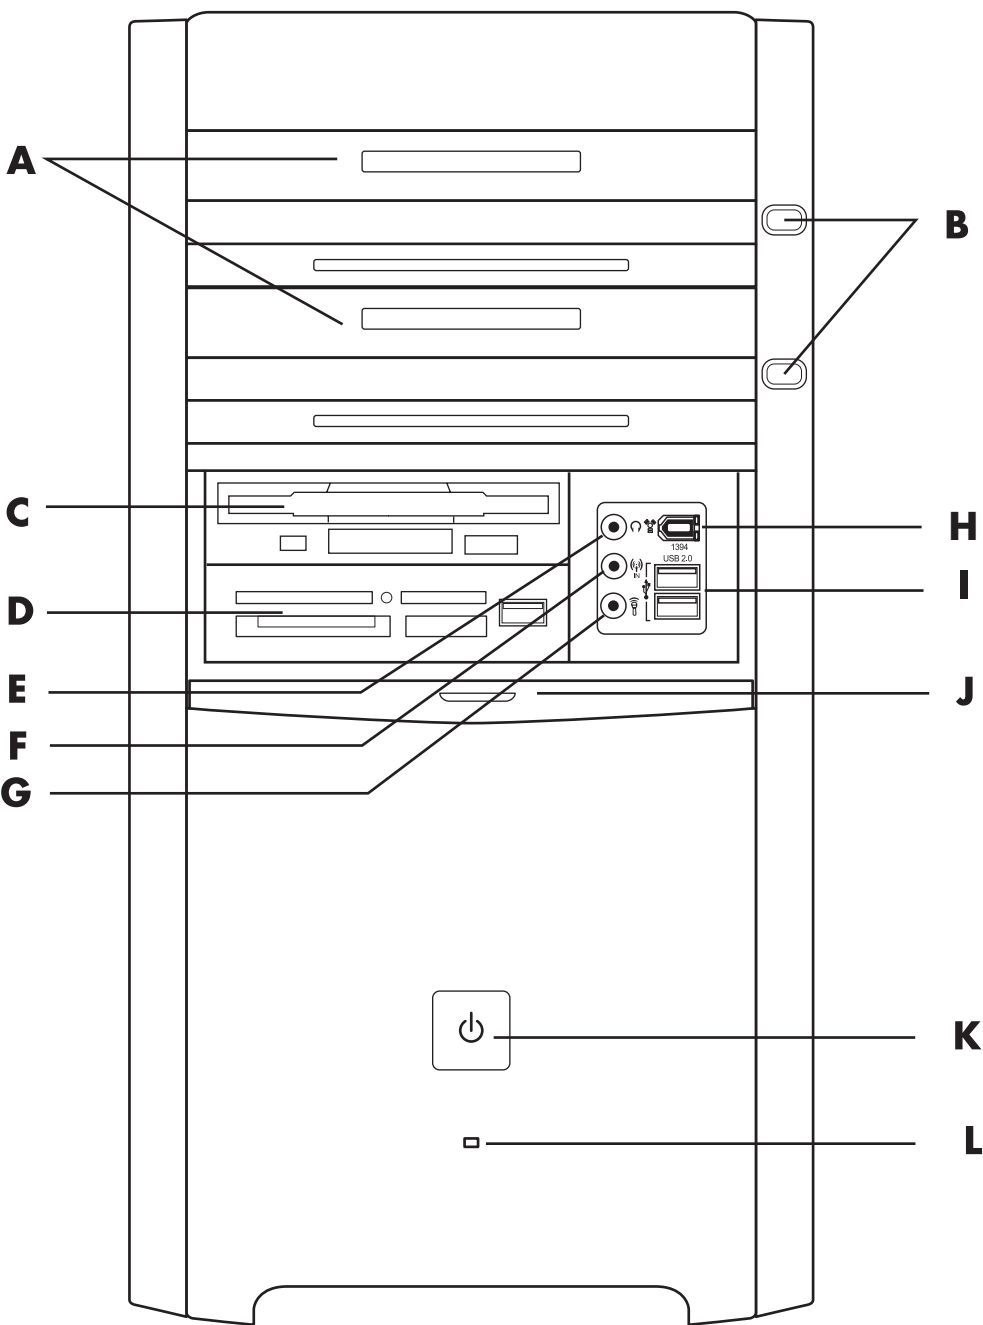

- A** — Optical drives
- B** — Optical drive Eject buttons
- C** — Floppy drive
- D** — Card reader
- E** — Headphones
- F** — Audio Line In
- G** — Microphone
- H** — FireWire (IEEE 1394) port
- I** — USB 2.0 ports
- J** — Door
- K** — On button with Indicator
- L** — Hard drive Activity light

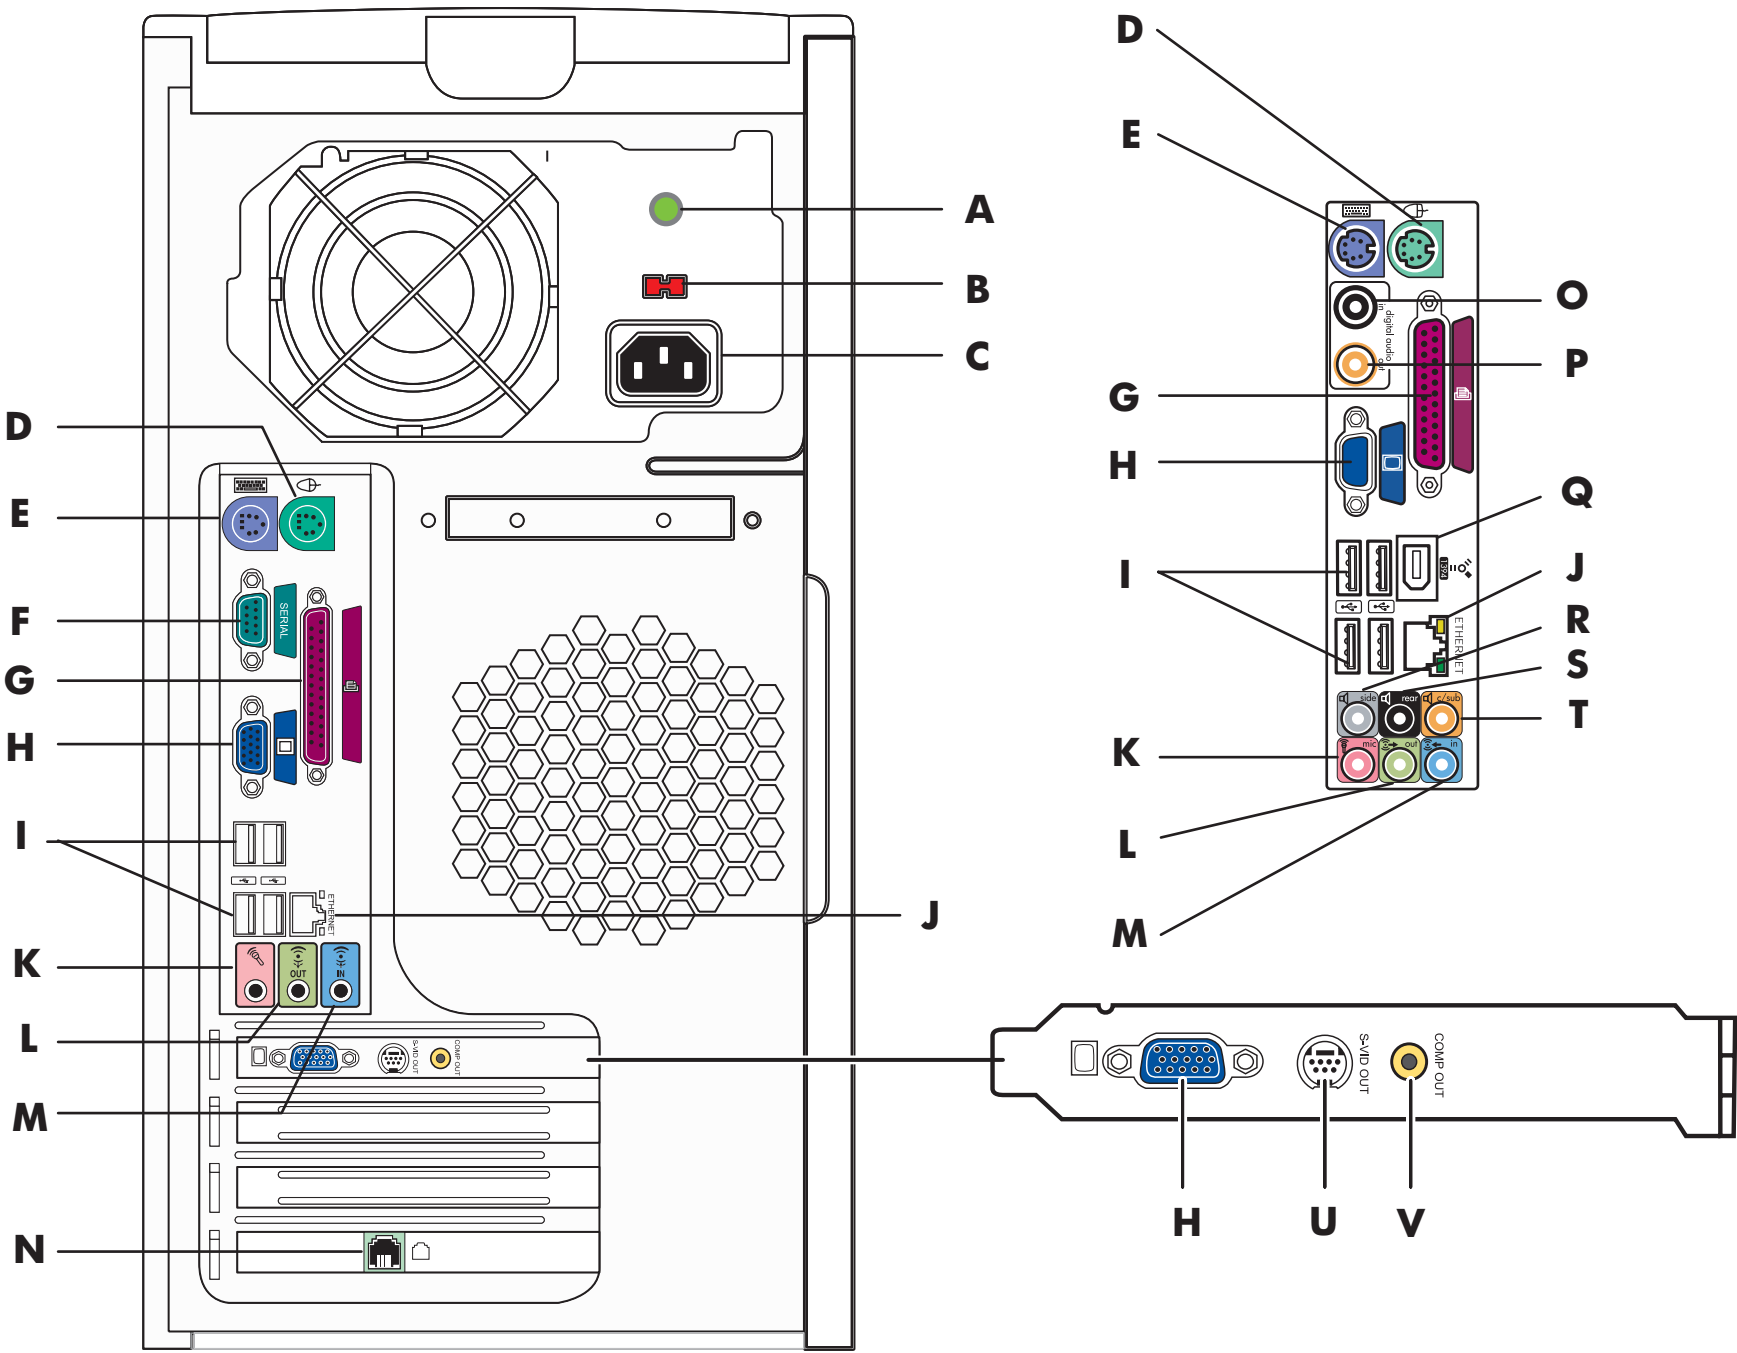

- A** — Power LED
- B** — Voltage selector
- C** — Power Cord connector
- D** — PS/2 Mouse connector
- E** — PS/2 Keyboard connector
- F** — Serial port
- G** — Parallel port
- H** — VGA Monitor port
- I** — 4 USB 2.0 ports
- J** — LAN (Ethernet)
- K** — Microphone connector
- L** — Audio Line Out
- M** — Audio Line In
- N** — Modem (Line In RJ-11)

- Select models only:**
- O** — Digital Audio In
 - P** — Digital Audio Out
 - Q** — FireWire (IEEE 1394) port
 - R** — Side speaker port
 - S** — Rear speaker port
 - T** — Center speaker/subwoofer port
 - U** — S-Video (TV Out)
 - V** — Composite Video Out